



## GoPro® Armor - Application Instructions



### Step 1: Clean

- Make sure to clean the GoPro® housing thoroughly with rubbing alcohol or soap & water.
- Make sure you let the housing dry after cleaning.




### Step 2: Apply

- Remove the Armor from the white backing one piece at a time.
- Carefully line up the Armor and apply pressure to the Armor. You can use a hairdryer or a heat gun to stretch the Armor during application if needed. Rub back and forth to make sure you've removed all the air bubbles and wrinkles. If you make a mistake, just carefully remove and then reapply.



### Step 3: Wait...

- Let the Armor dry and adhere to the housing for at least 30 minutes before using...
- While you wait, please take pictures and post on social media using #WeaponArmor or send them to us via email: [marketing@weaponarmor.com](mailto:marketing@weaponarmor.com)

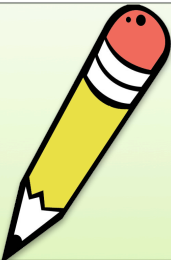

### Step 4: Feedback

- Your feedback means a lot to us! At your convenience, please post your positive review on eBay or Amazon! If you aren't satisfied, let us know at [sales@weaponarmor.com](mailto:sales@weaponarmor.com)

For installation video & FAQs, please visit [www.weaponarmor.com](http://www.weaponarmor.com) and click on the **Help** link. If you are unable to access the Internet, please give us a call 724-471-6040.

Designed for use with GOPRO® products. GOPRO® is a registered trademarks of Woodman Labs, Inc. in the United States and other countries. Mossy Oak® camouflage patterns is owned and a licensed product of Mossy Oak Inc. Weapon Armor LLC shall not be liable for any loss, injury or damages to the person or property resulting in the use of the product or any failure of or defect in this product, nor shall Weapon Armor LLC. Be liable to the initial user of this product or to any other person or entity for any general, special, direct, indirect, incidental, consequential, exemplary, punitive, or other damages of any kind whatsoever.